


NO LEAD* DRINKING WATER FAUCET

Cat. No.
17201

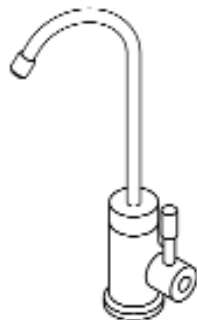


INSTALLATION INSTRUCTIONS



INSTALLATION INSTRUCTIONS

1. PLACE FAUCET MOUNTING NIPPLE INTO 1/2" MINIMUM, 1 3/8" MAXIMUM HOLE IN SINK OR DECK.
2. SLIDE 250006 RUBBER WASHER, 250116 METAL WASHER WITH DIMPLES FACING UP AND 250004 LOCK WASHER ONTO MOUNTING NIPPLE. SCREW ON 250003 LOCK NUT AND HAND TIGHTEN.
3. POSITION FAUCET IN THE CORRECT DIRECTION AND TIGHTEN LOCK NUT.
4. SLIDE 250001 COMPRESSION NUT OVER WATER INLET TUBE. SLIDE 250002 FERRULE ONTO WATER INLET TUBE. IF PLASTIC TUBING IS BEING USED PUSH 250169 TUBE INSERT INTO TUBE.
5. TIGHTEN 250001 COMPRESSION NUT. DO NOT OVER TIGHTEN.
6. MAKE SURE HANDLE IS POINTING UP IN THE CLOSED POSITION, TURN ON WATER SUPPLY AND CHECK FOR LEAKS.
7. SPOUT ORINGS, CLIP AND CERAMIC CARTRIDGE PARTS ARE SHOWN SHOULD SERVICE BE REQUIRED.

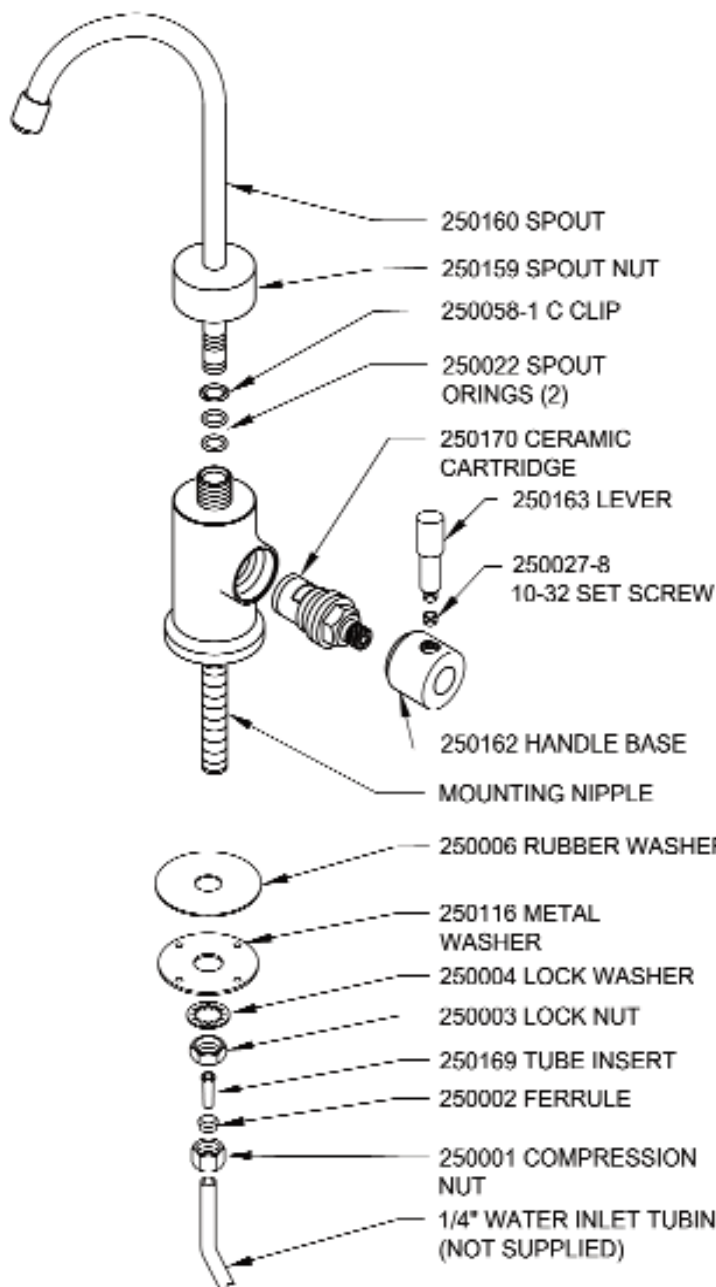

FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SONIT SCRUB[®], SCRUBBING BUBBLES[®] OR COMET[®] TO CLEAN. DO NOT USE BRILLO[®] OR SCOTCH BRITE[®] PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE USING A SOFT CLOTH. STANDARD WINDEX[®] CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS.

TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNUBA WAX WITHOUT CLOTHES WILL HELP PROTECT THE FINISH.

WARRANTY

CONTACT BARCLAY FOR WARRANTY INFORMATION. CLAIMS REQUIRE PROOF OF PURCHASE.